


QUICK CONFIGURATION GUIDE

Connection

Connect the "RS-232 to RD3 cable S" (Ref. 36788) to the weight indicator and to the RD3 Repeater Indicator.

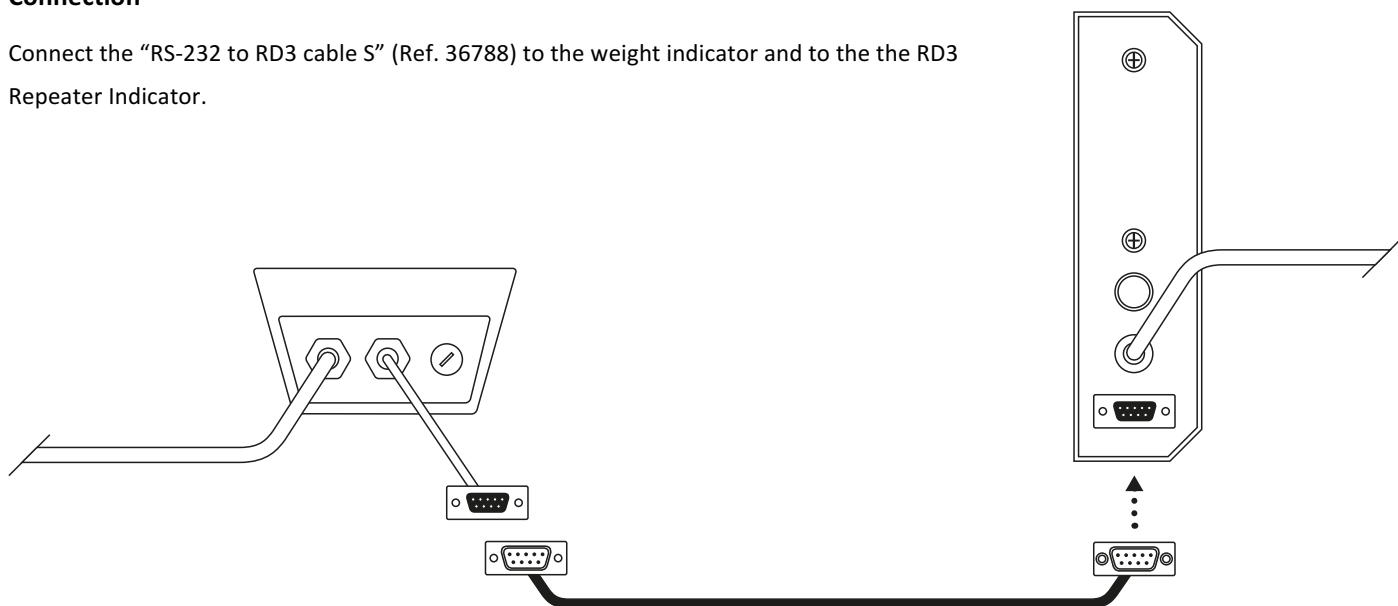

Step 1: Configure the S3-RS / S5i-RS scale for use with the RD3 Repeater Indicator

The S3-RS / S5i-RS scale is factory-configured for using a model PR4 printer. For connect it to RD3 Repeater Indicator, you need to first change this configuration before its use, following the indications contained in this document. Once this procedure has been completed, the configuration is registered in the unit's non-volatile memory and it will not be necessary to repeat it.

1. Press key **[PLU/M]** to access the configuration options menu.
2. Press key **←** to move to the **UART** menu option.
3. Press key **↵** to validate. The visor will display the **br 009** option.
4. Press key **↵** to validate. The visor will display the **LC-P 1** option.
5. Press key **↵** to validate. The visor will display the **LENP 1** option.
6. Press key **↵** to validate. The visor will display the **PC-P 0** option.
7. Press key **↵** to validate. The visor will display the **dOLP 1** option.
8. Press key **↵** to validate. The visor will display the **rEPP 0** option.
9. Press key **↑**. The visor displays the **rEPP 1** message to indicate that the RD3 Repeater is connected.
10. Press key **↵** to validate. The visor will display the **bC-P 2** option.
11. Press key **↵** to validate. The visor will display the **PC2P 1** option.
12. Press key **↵** to validate. The visor will display the **SMod 1** option.
13. Press key **↵** to validate. The visor will display the **UART** option.
14. Press key **[U/ESC]** to exit the configuration options menu and return to normal operating mode (weight indicator).
The visor will display the **SAVE** message, indicating that the selected option has been saved to the indicator's non-volatile memory.



Gram Precision S.L.
Travesía Industrial, 11 · 08907
Hospitalet de Llobregat · Barcelona (Spain)
Tel. +34 902 208 000 · +34 93 300 33 32
Fax +34 93 300 66 98
comercial@gram.es
www.gram-group.com

Download the full manual from the following link:

http://gram-group.com/wp-content/uploads/2016/12/MANUAL_K3_2017_ENG.pdf

